



Main POSITIVE output
also goes to BMS JST B10

To BMS JST connector B9

To BMS JST connector B8

To BMS JST connector B7

To BMS JST connector B6

To BMS JST
connector B5
(one of the two)

Main NEGATIVE output
also goes to BMS JST B-

To BMS JST connector B1

To BMS JST connector B2

To BMS JST connector B3

To BMS JST connector B4