

Hoyt st puck remote recalibration.

Step 1: Press the T(down), M, and POWER buttons at the same time, and green LEDs will flash slowly to indicate calibration mode

Steps 2: Move the throttle wheel to the max and min positions and let it return back to center, then press the R button to exit and restart.

Steps 3: After step 2, the remote should beep and vibrate once. This indicates that the calibration was successful.

Steps 4: If the remote vibrates once but doesn't beep, the calibration has failed. Restart the remote and repeat steps 1-3.